

Melt Pressure Transducer DA

Operating Instructions Melt Pressure Sensor

DA



Certified to
ISO 9001:2008

Please read this instruction manual carefully before installing the transducer



Melt Pressure Transducer DA

Contents:

- 1. Introduction
- 2. Operating range and field of application
- 3. Danger areas
- 4. Waste disposal
- 5. Transport and storage
- 6. Cleaning of the sensors
- 7 Installing / Uninstalling
- 8. Connecting and commissioning
- 9. Technical Data
- 10. Dimensions



Melt Pressure Transducer DA

1. Introduction

Melt pressure transducers are precise measuring probes which obtain their measuring accuracy and long life span only if they are properly handled. These operating instructions should be studied carefully before installing the sensor, thus ensuring a trouble-free operation. Nevertheless, should you encounter any difficulties, please feel free to contact us or our representatives - we will be pleased to be of assistance.

These operating instructions are meant to give general information on all types of Gneuss pressure sensors (see points 1 to 8). As from point 9, specific information on the individual sensor type is given.

2. Operating range and field of application:

Gneuss melt pressure transducers have exclusively been designed for the pressure monitoring of liquid, doughy or pasty materials at high temperatures. These must have a homogeneous constitution. The application area has to be selected in such a manner, that a max. differential pressure of 2 % of the measuring range – based on the diaphragm surface - is not exceeded. Any use beyond the above mentioned application area does not conform to regulations.

3. Danger areas:

In the complete application area of the melt pressure transducer, there is a risk of combustion. If the pressure transducer is not installed or uninstalled correctly during the applying of pressure there is a risk of hot media emerging.



Melt Pressure Transducer DA

4. Waste disposal:

Pressure transducers filled with mercury, have to be disposed of as hazardous waste. A free of charge and ecologically-friendly disposal can be carried out by Gneuss Kunststofftechnik GmbH.

5. Transport and storage:

Gneuss pressure transducers are generally dispatched in separate packages. In case of mechanical exposure, the sensing diaphragm is protected by an aluminium cap. This cap should be screwed on at all times of storage.

6. Cleaning of the sensors

In order to clean the diaphragm, the sealing surface and the process thread, the sensor must have the same temperature as the plastic melting point. The diaphragm and the sealing surface can be wiped down with a soft cloth, the thread can be cleaned with a steel brush.

(Do not come into contact with the diaphragm surface)

7. Installing / Uninstalling

Installing

On installation of the pressure transducer it is imperative to note that the sensor bore corresponds to the dimensions mentioned below. The fitting accuracy can be checked by means of a test bolt Prior to mounting the sensor, the thread should be covered with a heat resistant paste. Should the machinery with the sensor drilling still be at production temperature, a certain preheating period for the sensor should be taken into consideration, in order to avoid a seizing of the sensor due to thermal expansion.

On mounting the transducer, it is important to note that the sensor is not screwed in at an angle and that the sensor does not fall into the bore. It is of vital importance that the force for installing the sensor must only be applied at the shaft (hexagon). Do not apply any force to the sensor head!

Starting torque for 1/2-20 UNF = max. 30 Nm Starting torque for M 18 x 1,5 = max. 50 Nm




Melt Pressure Transducer DA

Uninstalling

The uninstalling of the pressure transducer has to be done in a heated up condition (plastic melting point)

On removal of the sensor, please take note that the diaphragm is not brought into contact. It is of vital importance that the force for uninstalling the sensor must only be applied at the shaft (hexagon). Do not apply any force to the sensor head!

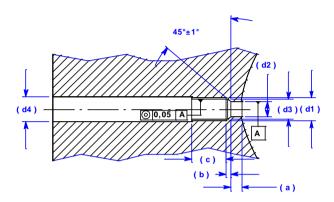

d1	M18x1,5	½"20UNF 2A
d2	Ø 10,1 ^{+0,05}	Ø 7,9 ^{+0,05}
d3	Ø 16,1 ^{+0,1}	Ø 10,7 ^{+0,1}
d4	Ø 20 ^{+0,2}	Ø 13 ^{+0,2}
а	6,1 ^{-0,1}	5,7 ^{-0,1}
b	4 -0,2	3,2 ^{-0,2}
C	25	19

8. Connections and commissioning

After the pressure transducer has been mounted into the line as is described in section 7, the electrical connection then has to be carried out according to the connections indicated on the next page. Gneuß pressure transducers are equipped with high-quality and robust plug connections. The connecting wire should be soldered with great care since otherwise, transmission errors of signals can be caused. We recommend to use Gneuß prefabricated connecting wires which are available from stock.


For commissioning, the sensor and the corresponding evaluation unit (e.g. Gneuß pressure measurement amplifier) have to be calibrated accordingly. The calibrating process has to be carried out when the line is heated up and at zero pressure. Please take the details concerning the way how to proceed from the respective operating instructions for the evaluation unit.



Melt Pressure Transducer DA

Electrical wiring


Plug type in sensor PT 02A-10-6P

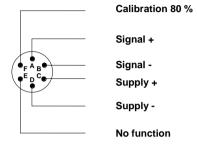

Plug type socket PT 06W-10-6S

Pin	Function	Colour scheme
		(Gneuß – cables)
Α	Signal +	Yellow
В	Signal -	White
С	Supply +	Brown
D	Supply -	Green
E	No function	Pink
F	Calibration 80%	Grey

Plug type in sensor 8P PC06A-12-8P



Pin	Function	Colour scheme (Gneuß – cables)
		· ·
Α	Supply +	Yellow
В	Signal +	White
С	Supply -	Brown
D	Signal -	Green
Е	Calibration 80%	Pink
F	Calibration 80%	Grey
G	free	
Н	free	



Melt Pressure Transducer DA

9. Technical Data:

Pressure range: See order specification

Supply: 6...10V maximum current consumption 28,6 mA @ 10V

Output signal: 2mV/V or 3,3 mV/V (see order specification)

Bridge resistance: 350Ω

Calibration point: 80 % of measuring range

Accuracy: 0,50 % FSO respectively $\leq \pm 0,25$ % FSO (see order specification)

Maximum over load: 150 % of measuring range

Zero deviation with temperature variations

at the membrane: 0,003 % from final value/°C

Zero deviation with temperature variations

at the measuring head: 0,003 % from final value/°C

Maximum temperature at

the membrane: 300°C with NTX-filling (W)

400°C with Hg-filling (M) 500°C with NaK-filling (N)

Maximum. temperature at

the measuring head: 125 °C

EMC: Electromagnetic disturbances and electromagnetic susceptibility


according to EN 61326

Degree of protection: IP 55



Melt Pressure Transducer DA

10. Dimensions

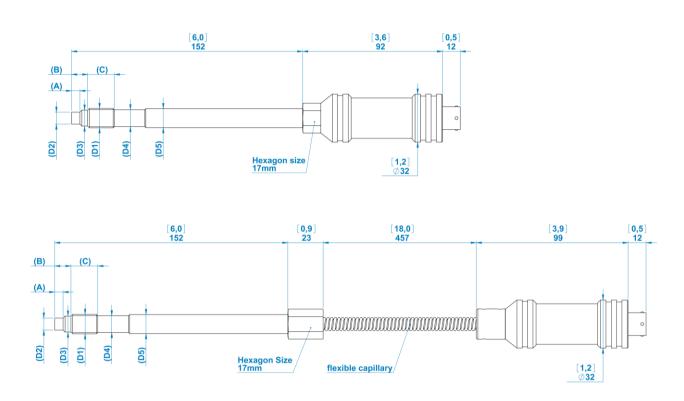


For available variations see order specification



Melt Pressure Transducer DA

Order specification <u>DA series</u> Pressure Transducer with mV/V output

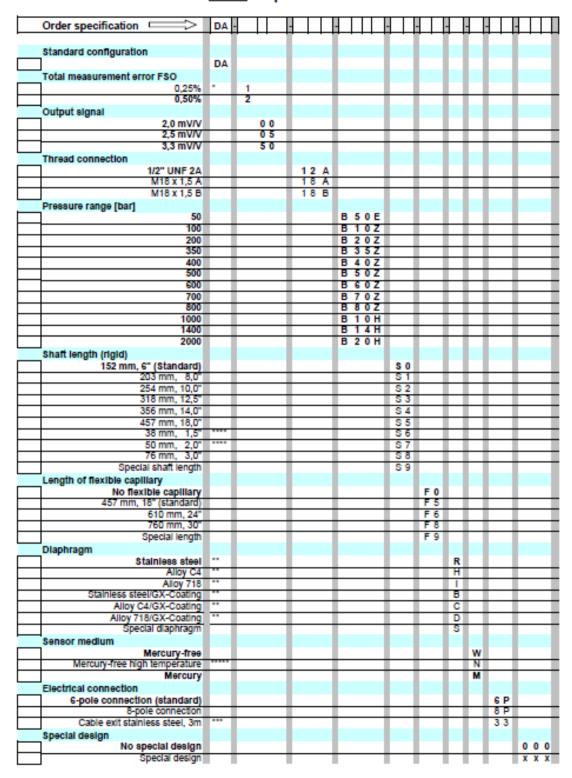

Only available ≥ 100 bar

[&]quot; As a standard, all diaphragms are coated against adhesive and glutinous media. Special coatings are available on request.

For cable exit, please confirm cable length. Unless specified, the standard length will be 3 m.


[&]quot;" Only available with flexible capillary

^{*****} Mercury-free High Temperature ≥ 300°



Melt Pressure Transducer DA

Order specification <u>DA series</u> Pressure Transducer with mV/V output

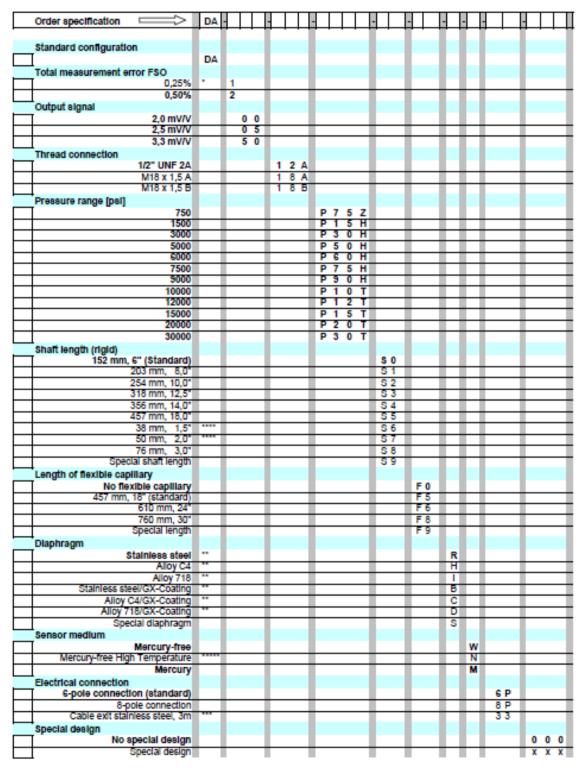

Only available ≥ 1500 psi

^{***} As a standard, all diaphragms are coated against adhesive and glutinous media. Special coatings are available on request.

For cable exit, please confirm cable length. Unless specified, the standard length will be 3 m.

[&]quot;" Only available with flexible capillary

^{*****} Mercury-free High Temperature ≥ 300*



Melt Pressure Transducer DA



Melt Pressure Transducer DA

Copyright notice acc. to ISO 16016

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

Gneuss Kunststofftechnik GmbH Moenichhusen 42 32549 Bad Oeynhausen, Germany

Phone: +49 (0) 5731 5307-0 Fax: +49 (0) 5731 5307-77

Mail: gneuss@gneuss.com

www.gneuss.de